READ ME FIRST

For use with LaserJet Pro M182 M183 printer series

 
Cartridge Installation

Step 1: Make sure the power is turned on when replacing a new replacement toner cartridge

Step 2: Install the new replacement cartridge into the printer and wait for 1-2 minutes

Step 3: The LCD display should prompt the "The indicated cartridge are Non-HP cartridge" message, press OK to continue





SAY No to firmware update

Updating your printer firmware version or accepting new firmware update notifications from the OEM HP may stop you from using compatible cartridges. Turning off the automatic update setting on your printer and click 'No" when receiving a new firmware update notification is the best way to protect your cartridges from any future firmware update issue.

How to disable Automatic Firmware Update on your printer

By turning off the automatic update setting on your printer, the printer will stop automatically downloading updates onto your printer and ask for permission before downloading any update.

Step 1: Go to the Main page and select "Setup Menu"
Step 2: On the Setup menu screen, select "Service"
Step 3: On the Service screen, select "LaserJet Update"

ottep 5. Off the service screen, select Laserset opulate

Step 4: On the LaserJet Update screen, select "Manage Updates"
Step 5: On the Manage Update screen, select "Allow Updates"

Step 6: On the Allow Updates screen, select "No"

- The automatic firmware feature on your printer is now turned off -